

MHOMEMADE MODERN DIY OUTDOOR SOFA By Ben Uyeda of HomeMade-Modern.com This DIY outdoor sofa can be made out of 2x6s using just three basic powertools. A video of this project is on the HomeMade Modern YouTube Channel. OVERVIEW **Outdoor Cushions**




We made the frame for the sofa out of 2x6s cut with a circular saw and screwed together with 3-1/8" and 2-1/2" finish screws. The outdoor cushions are from Home Depot and we ordered the hairpin legs off of Amazon.

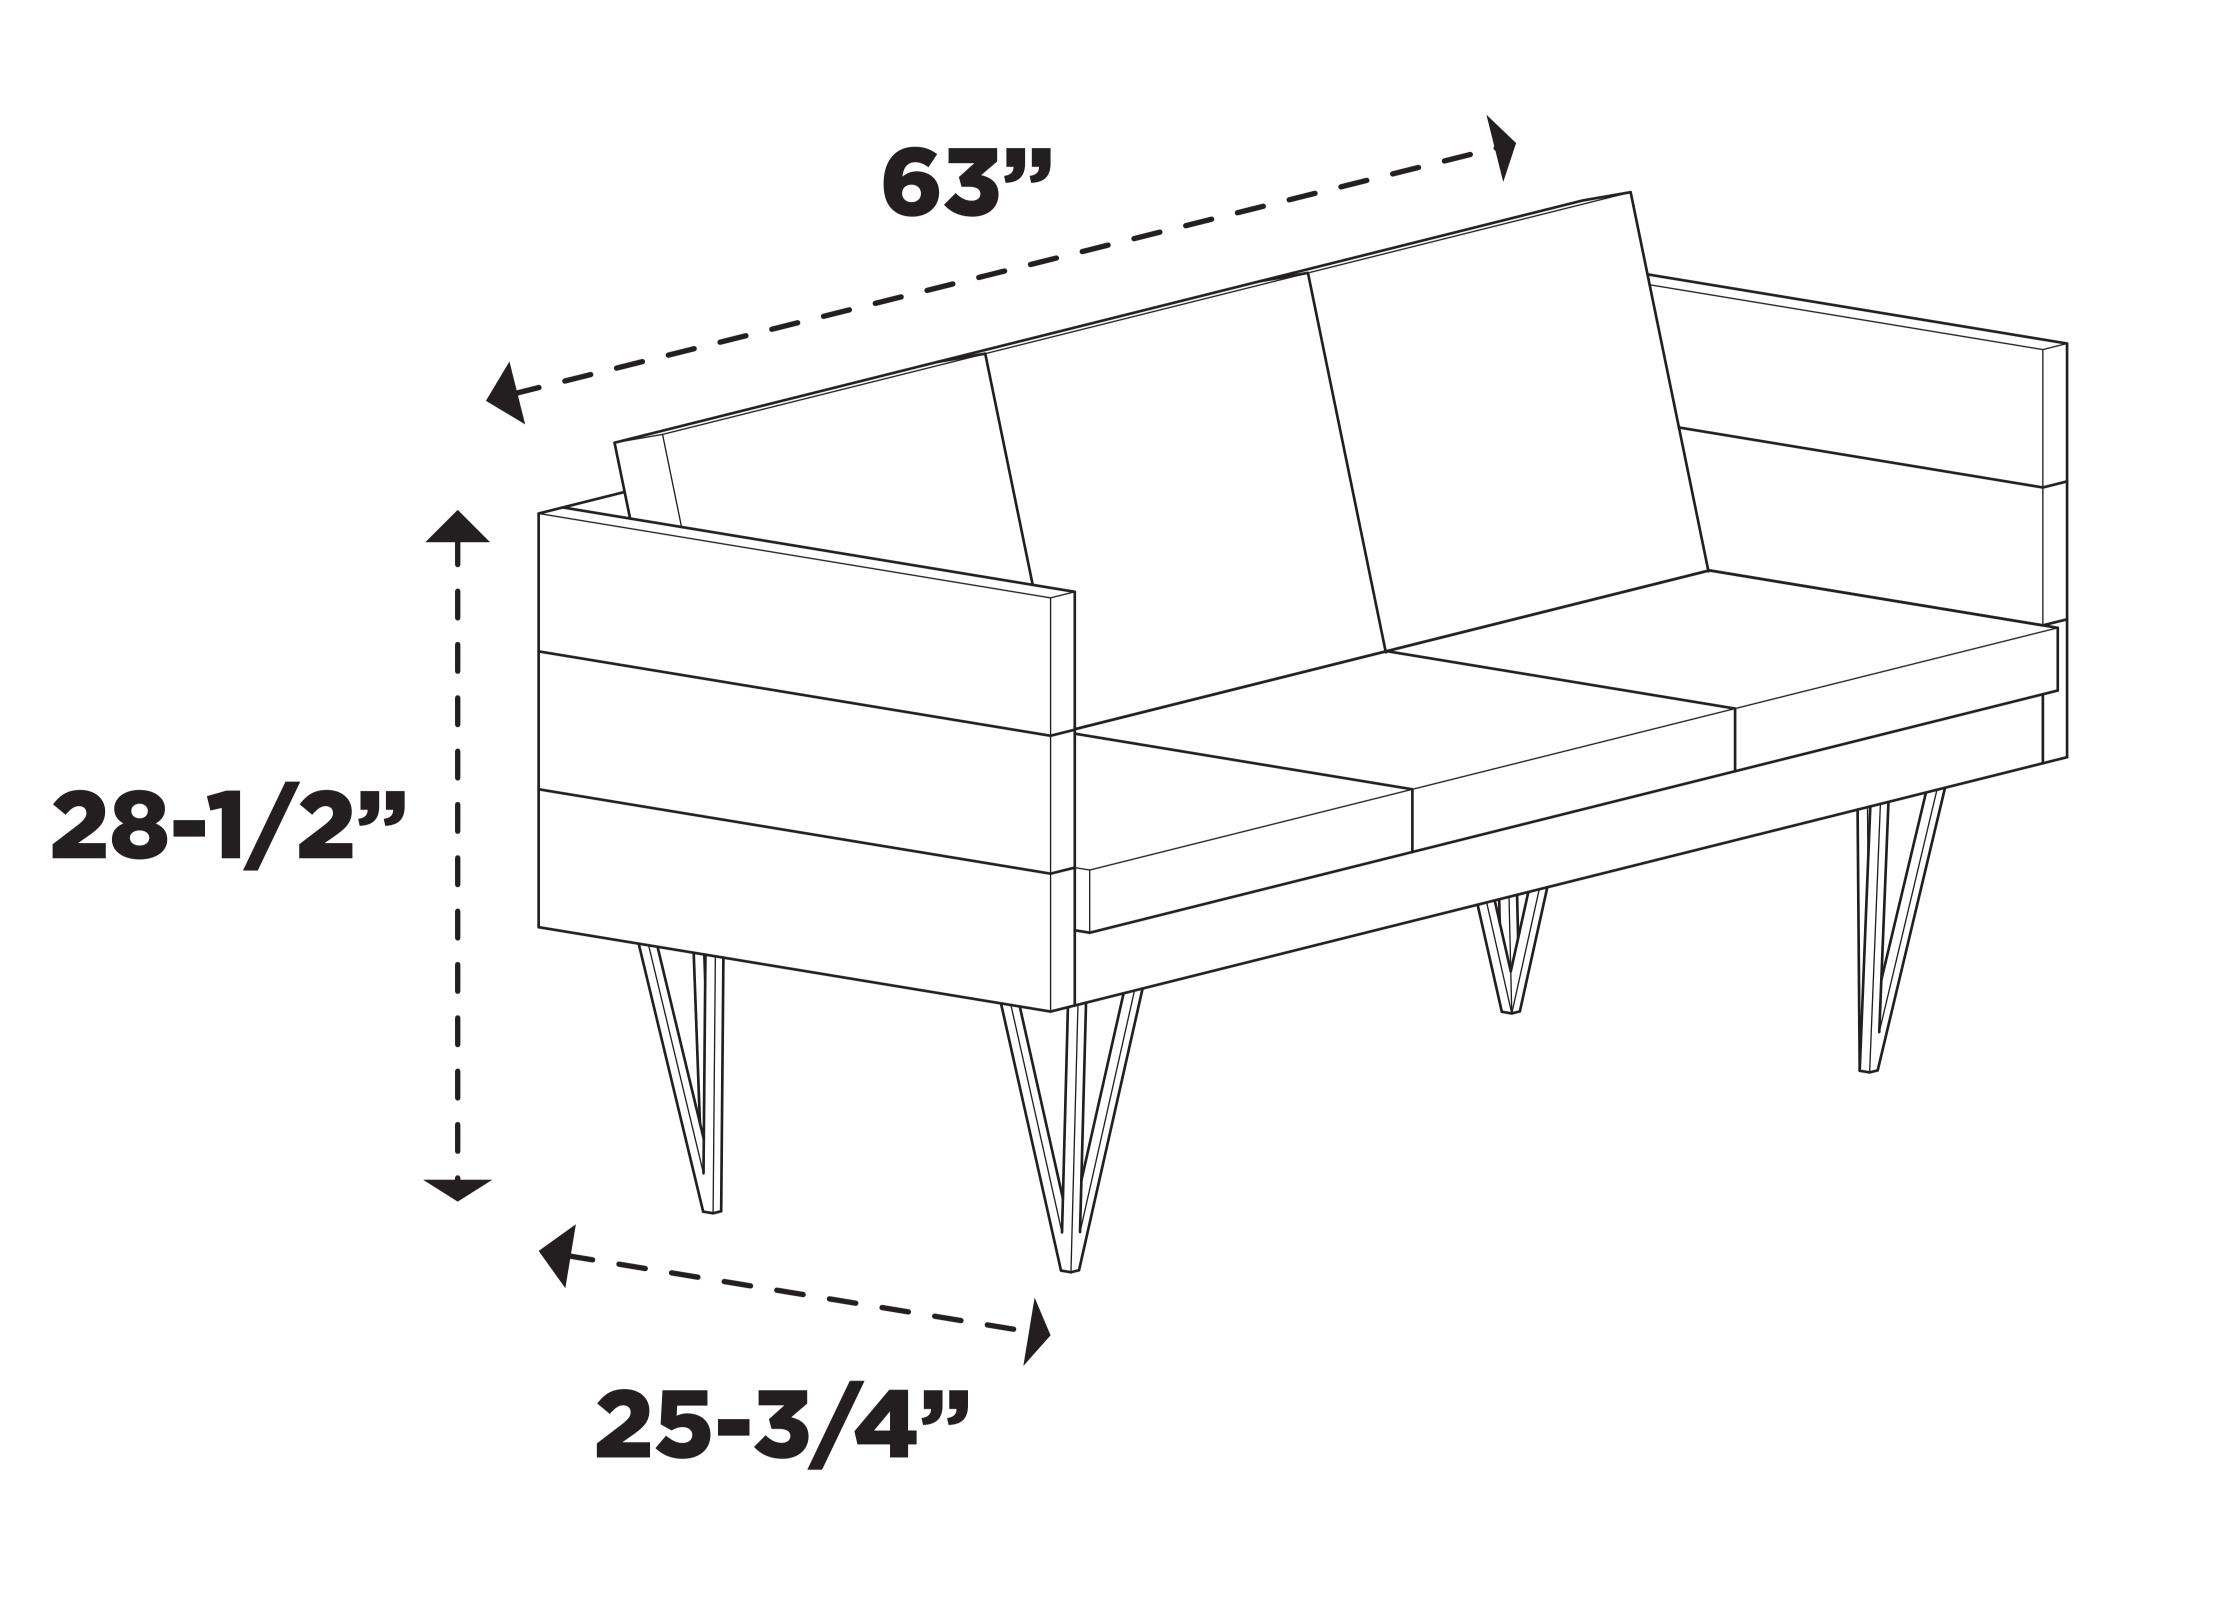

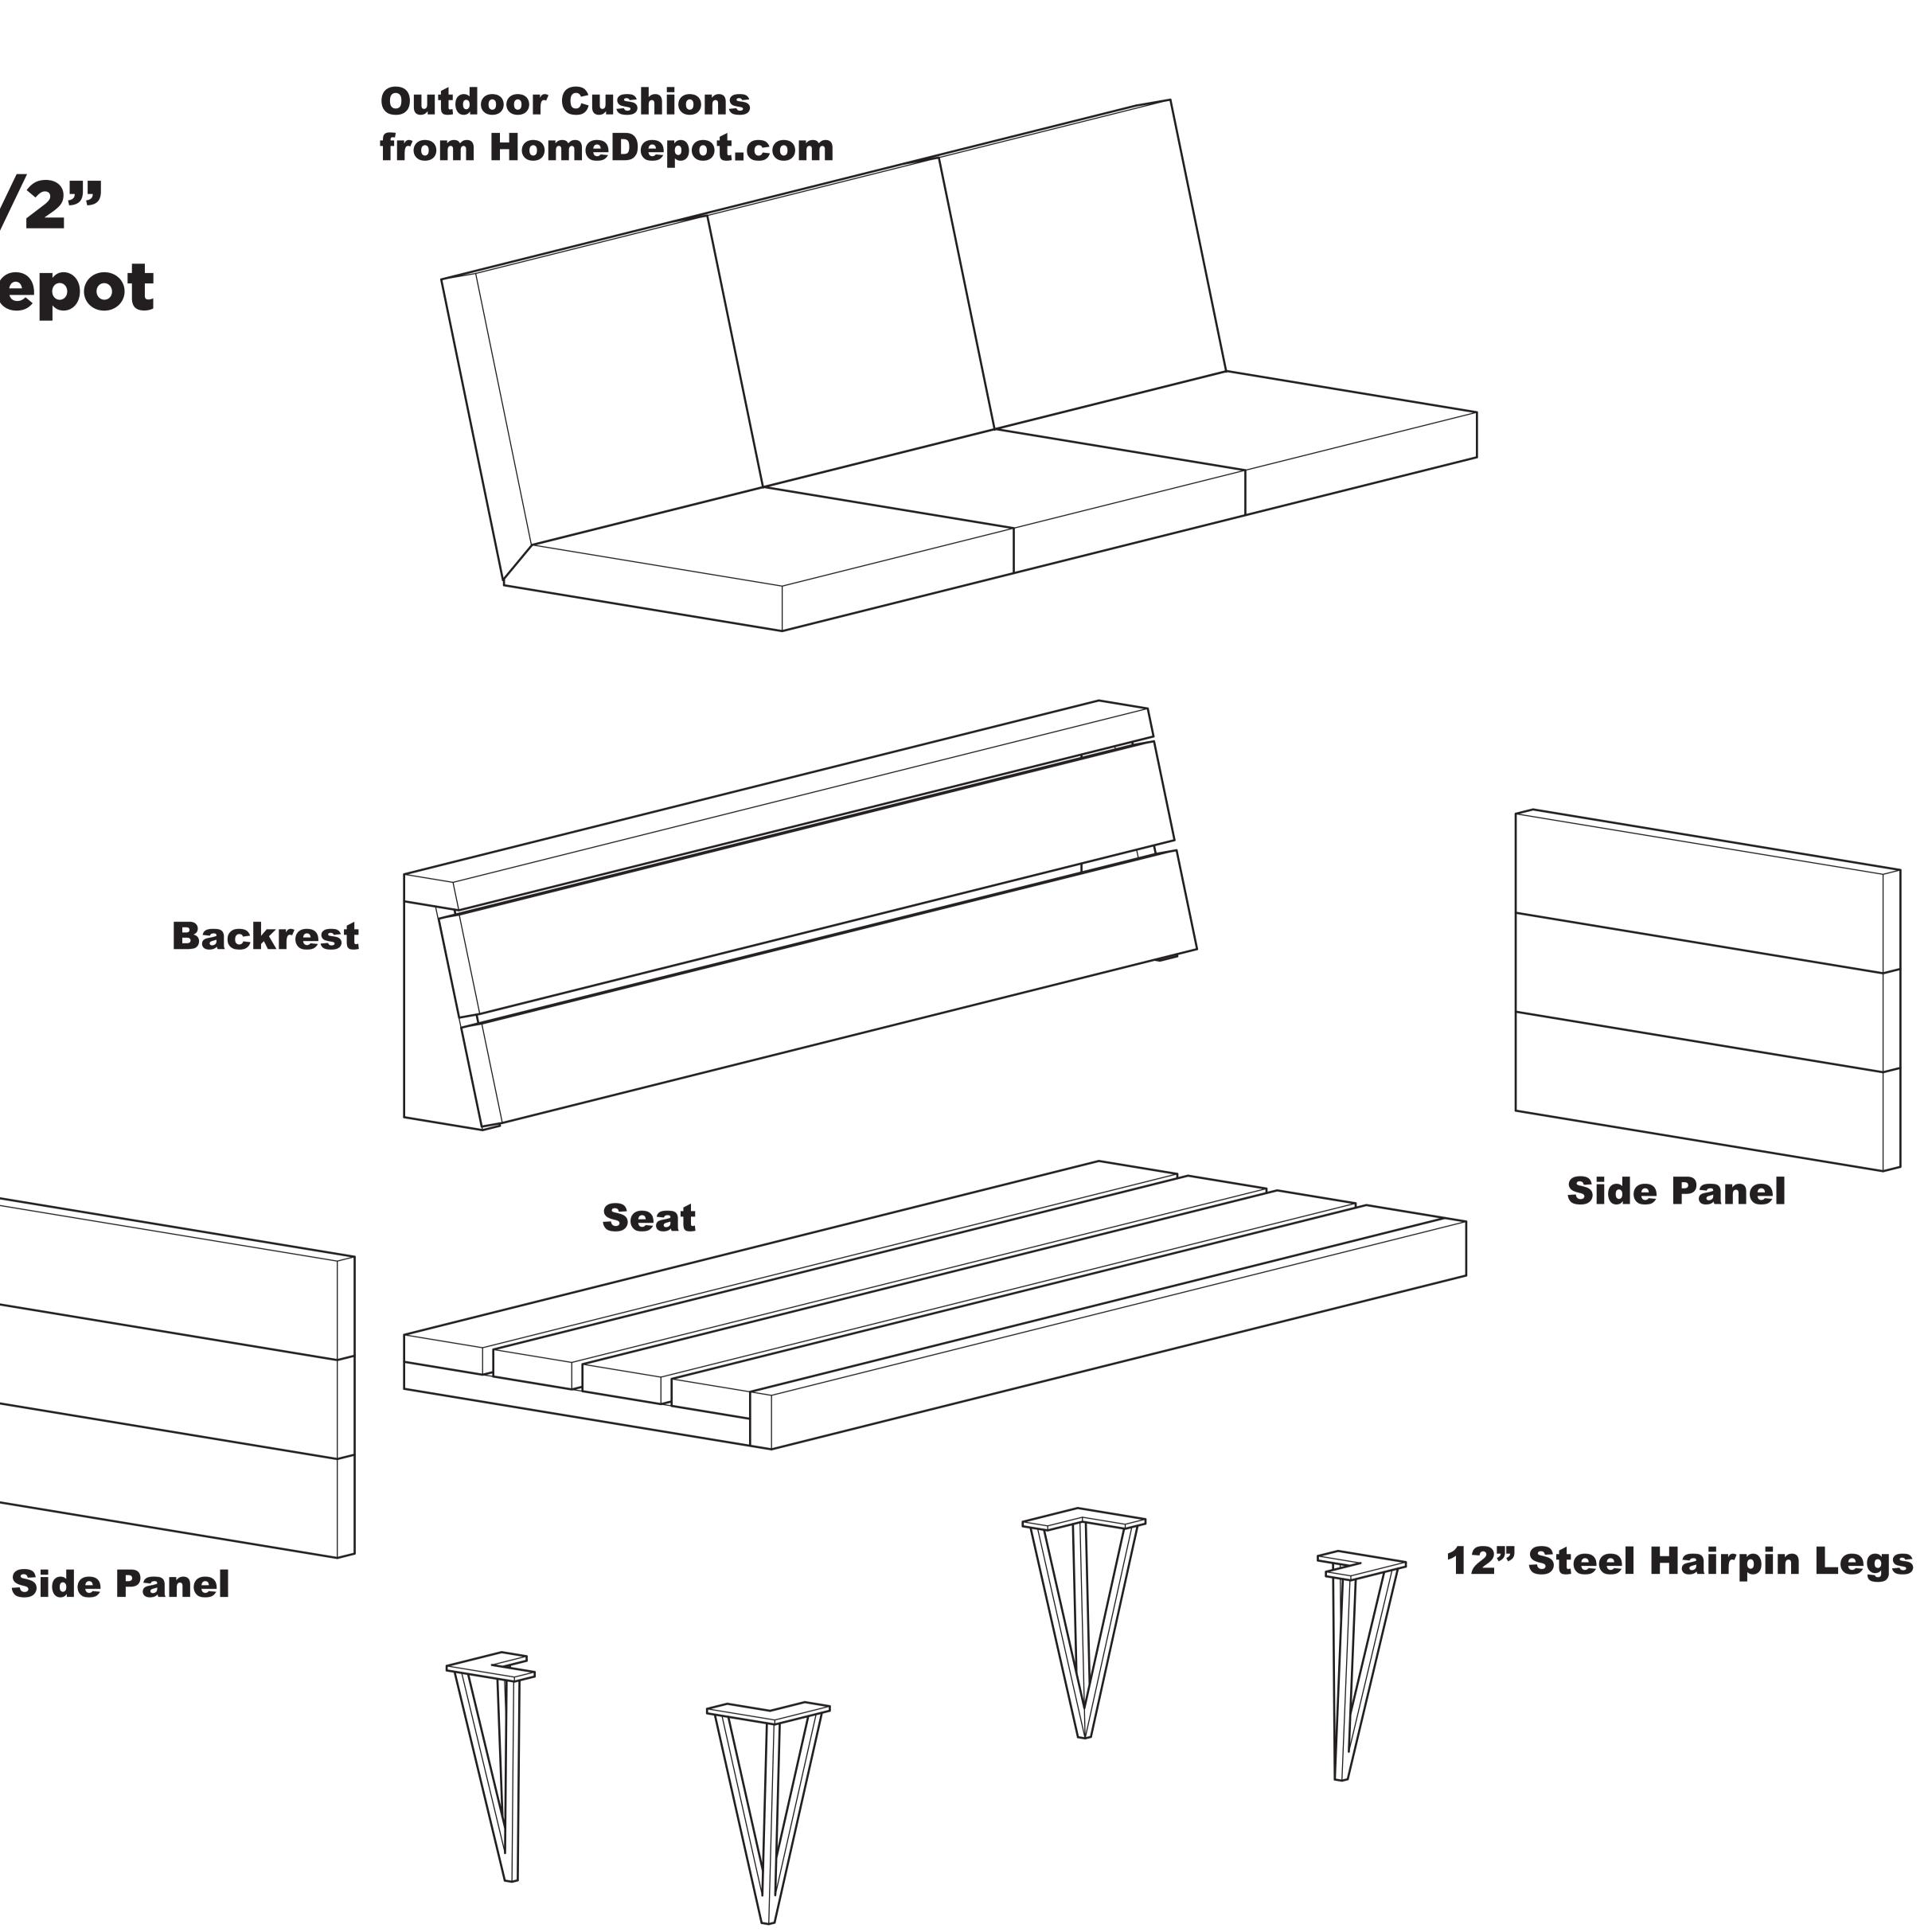


STEP 1. CUT THE 2X6s


I used my circular saw to cut the 2x6s to length. 2x6s are 5-1/2" by 1-1/2" and come in 8-foot, 10-foot, and 12-foot lengths.

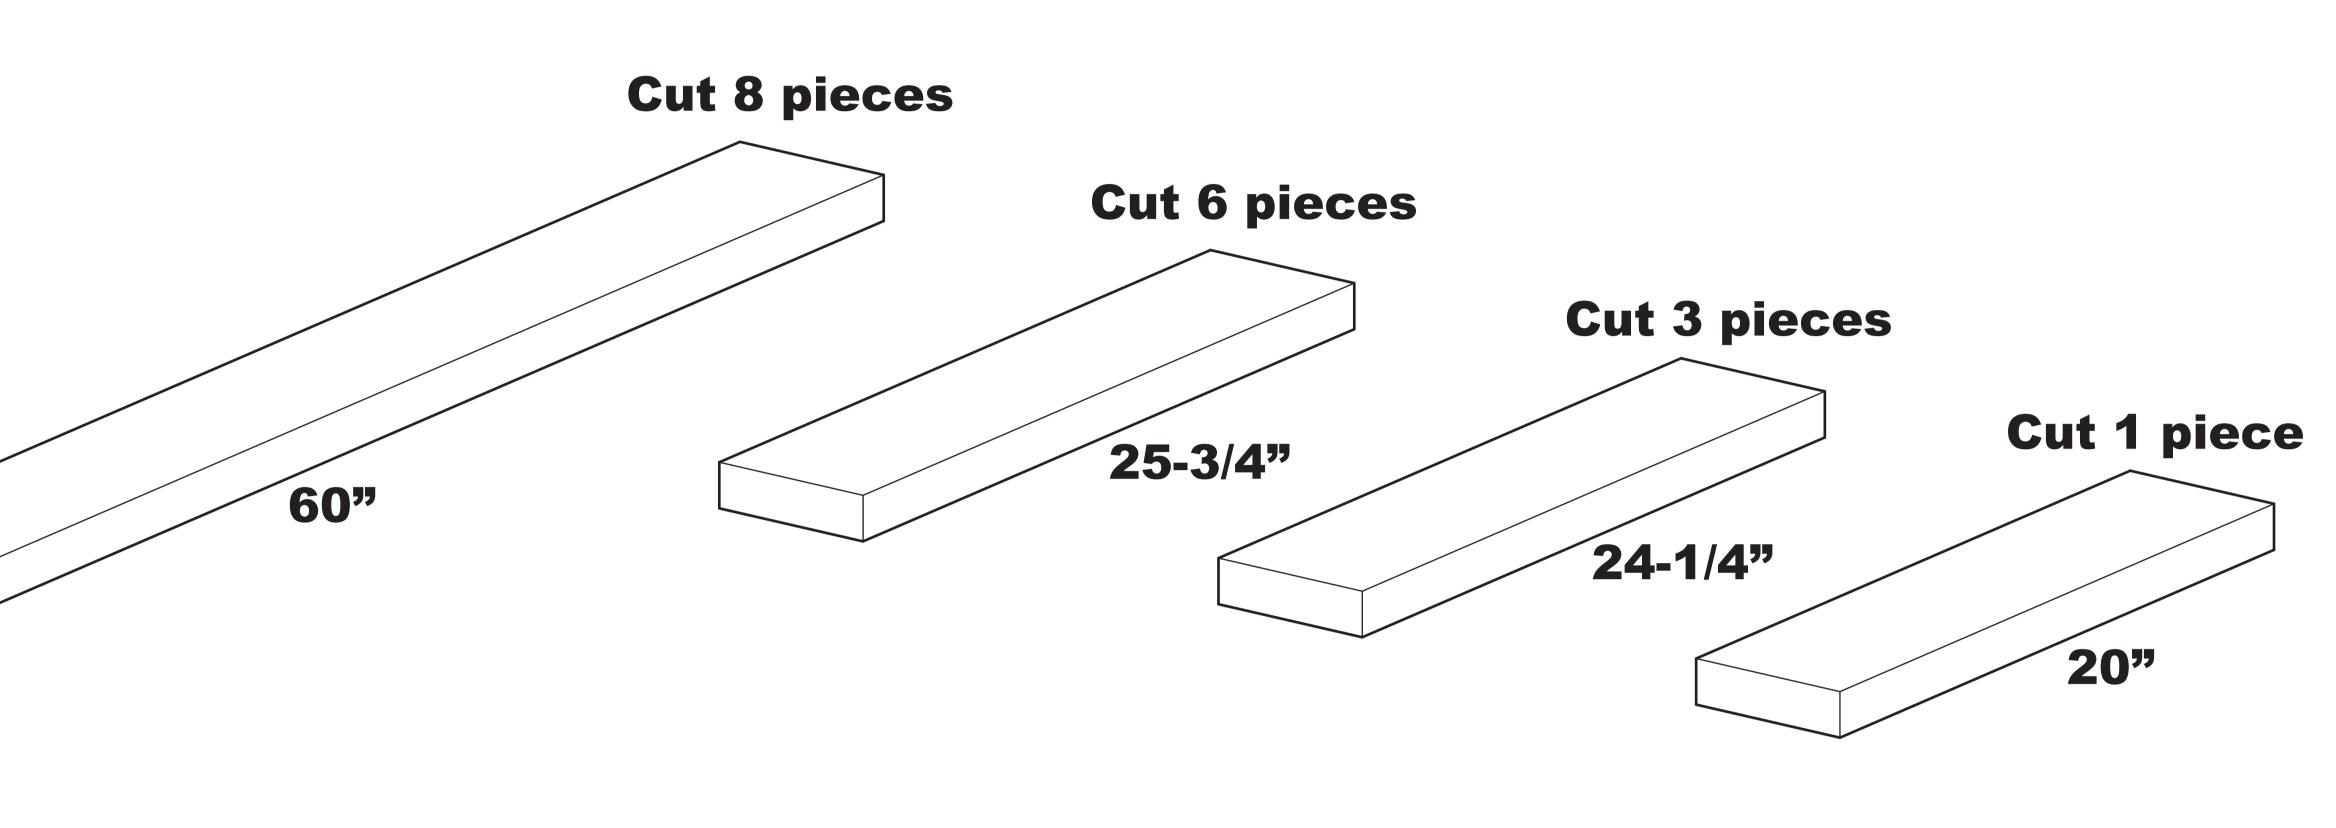

STEP 2. RIP THE 2X6s

I used my circular saw to rip one of the 60" long pieces of 2x6s into two pieces. I then cut the narrower piece to length

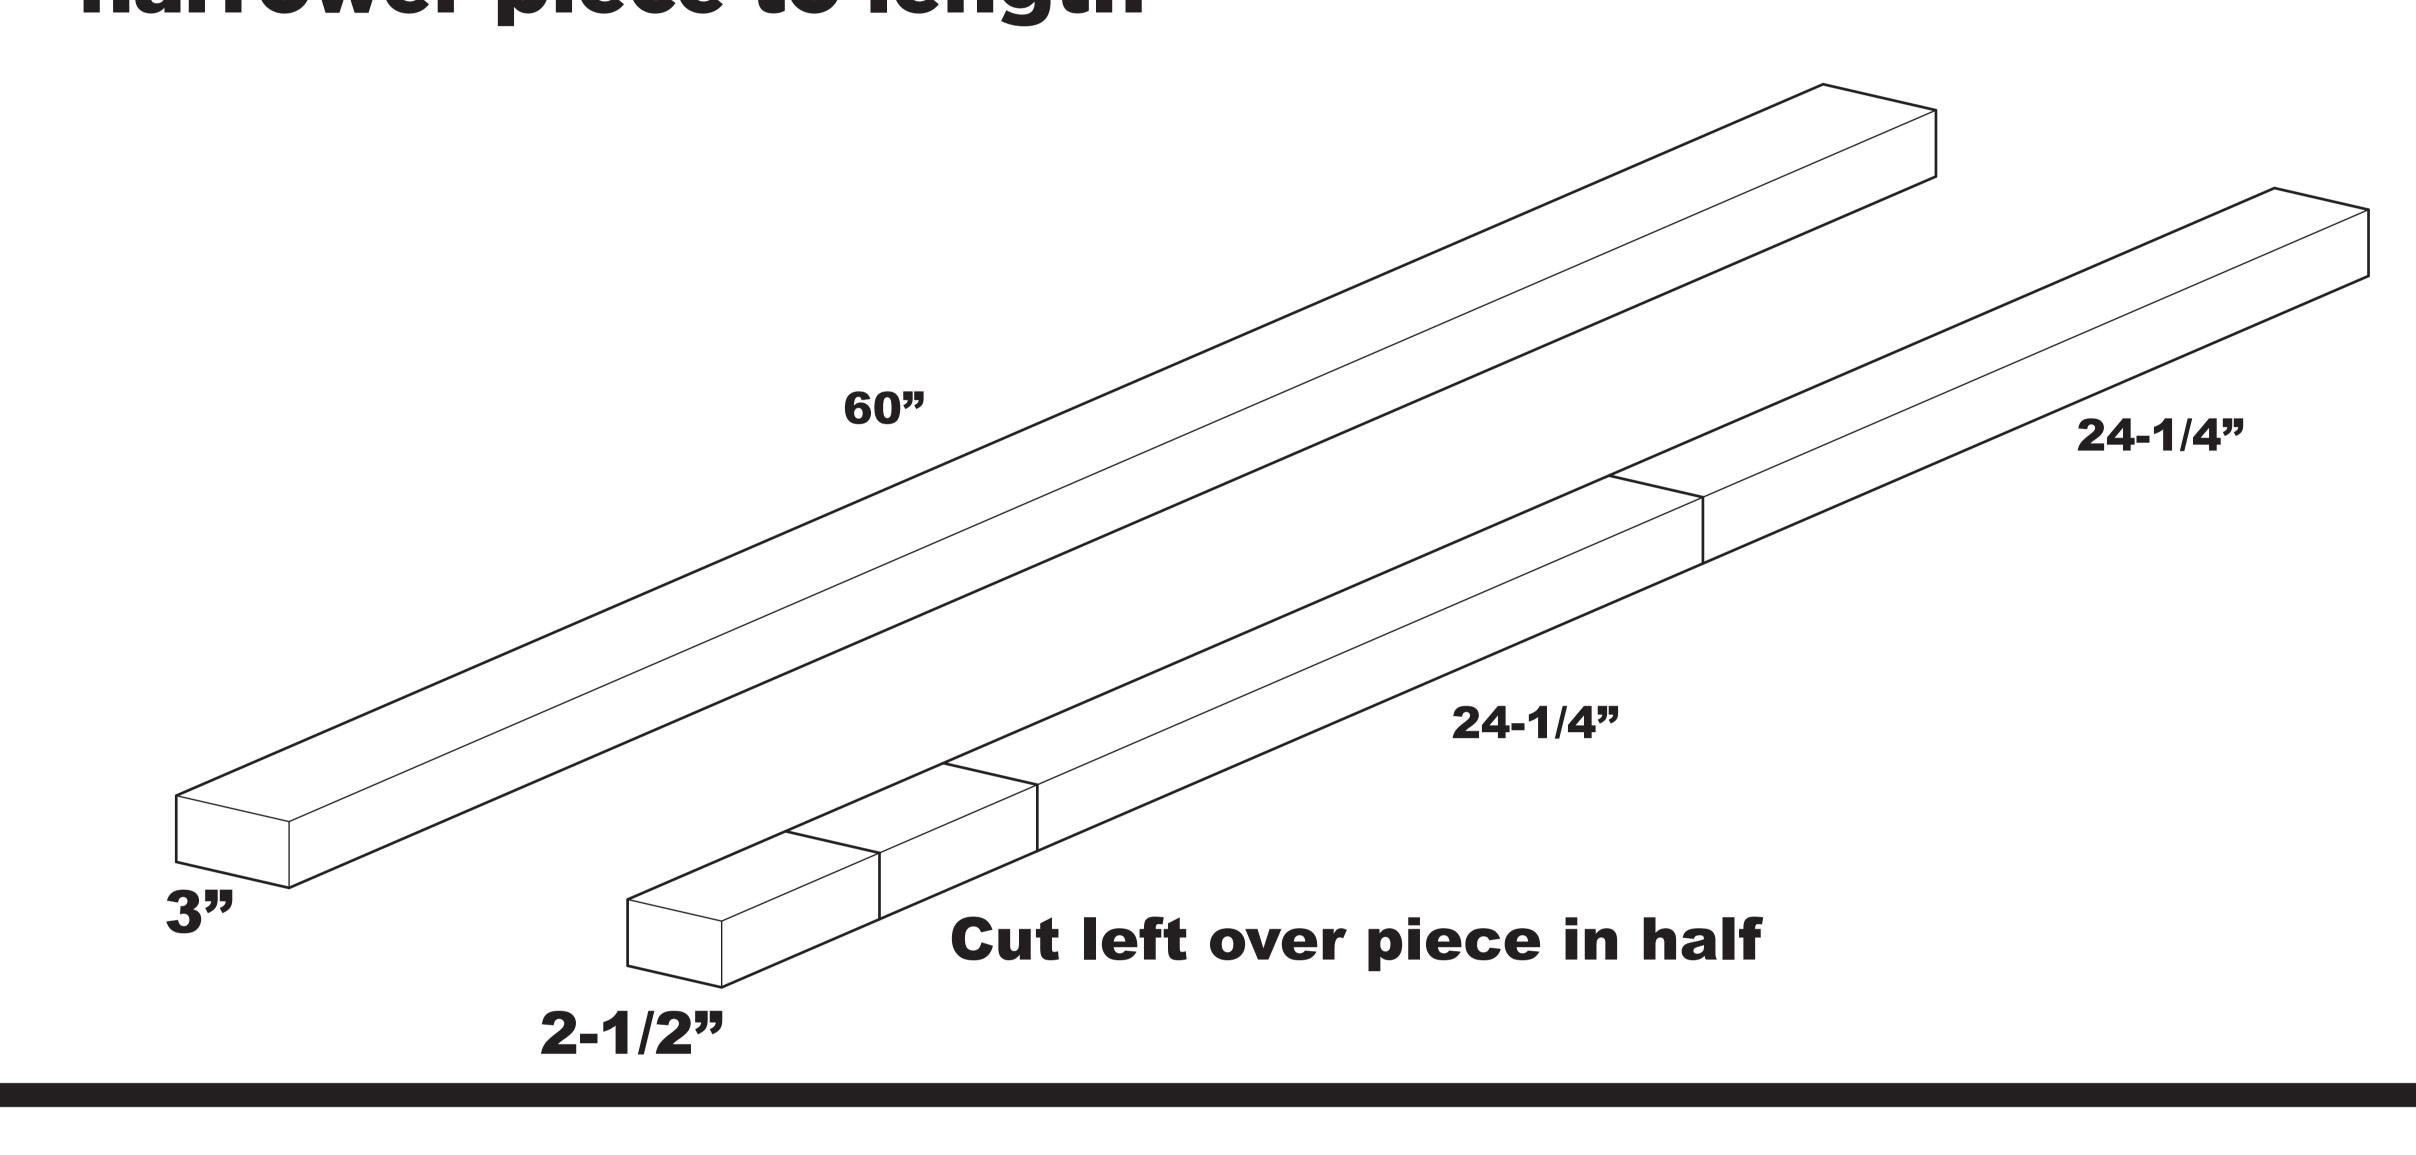

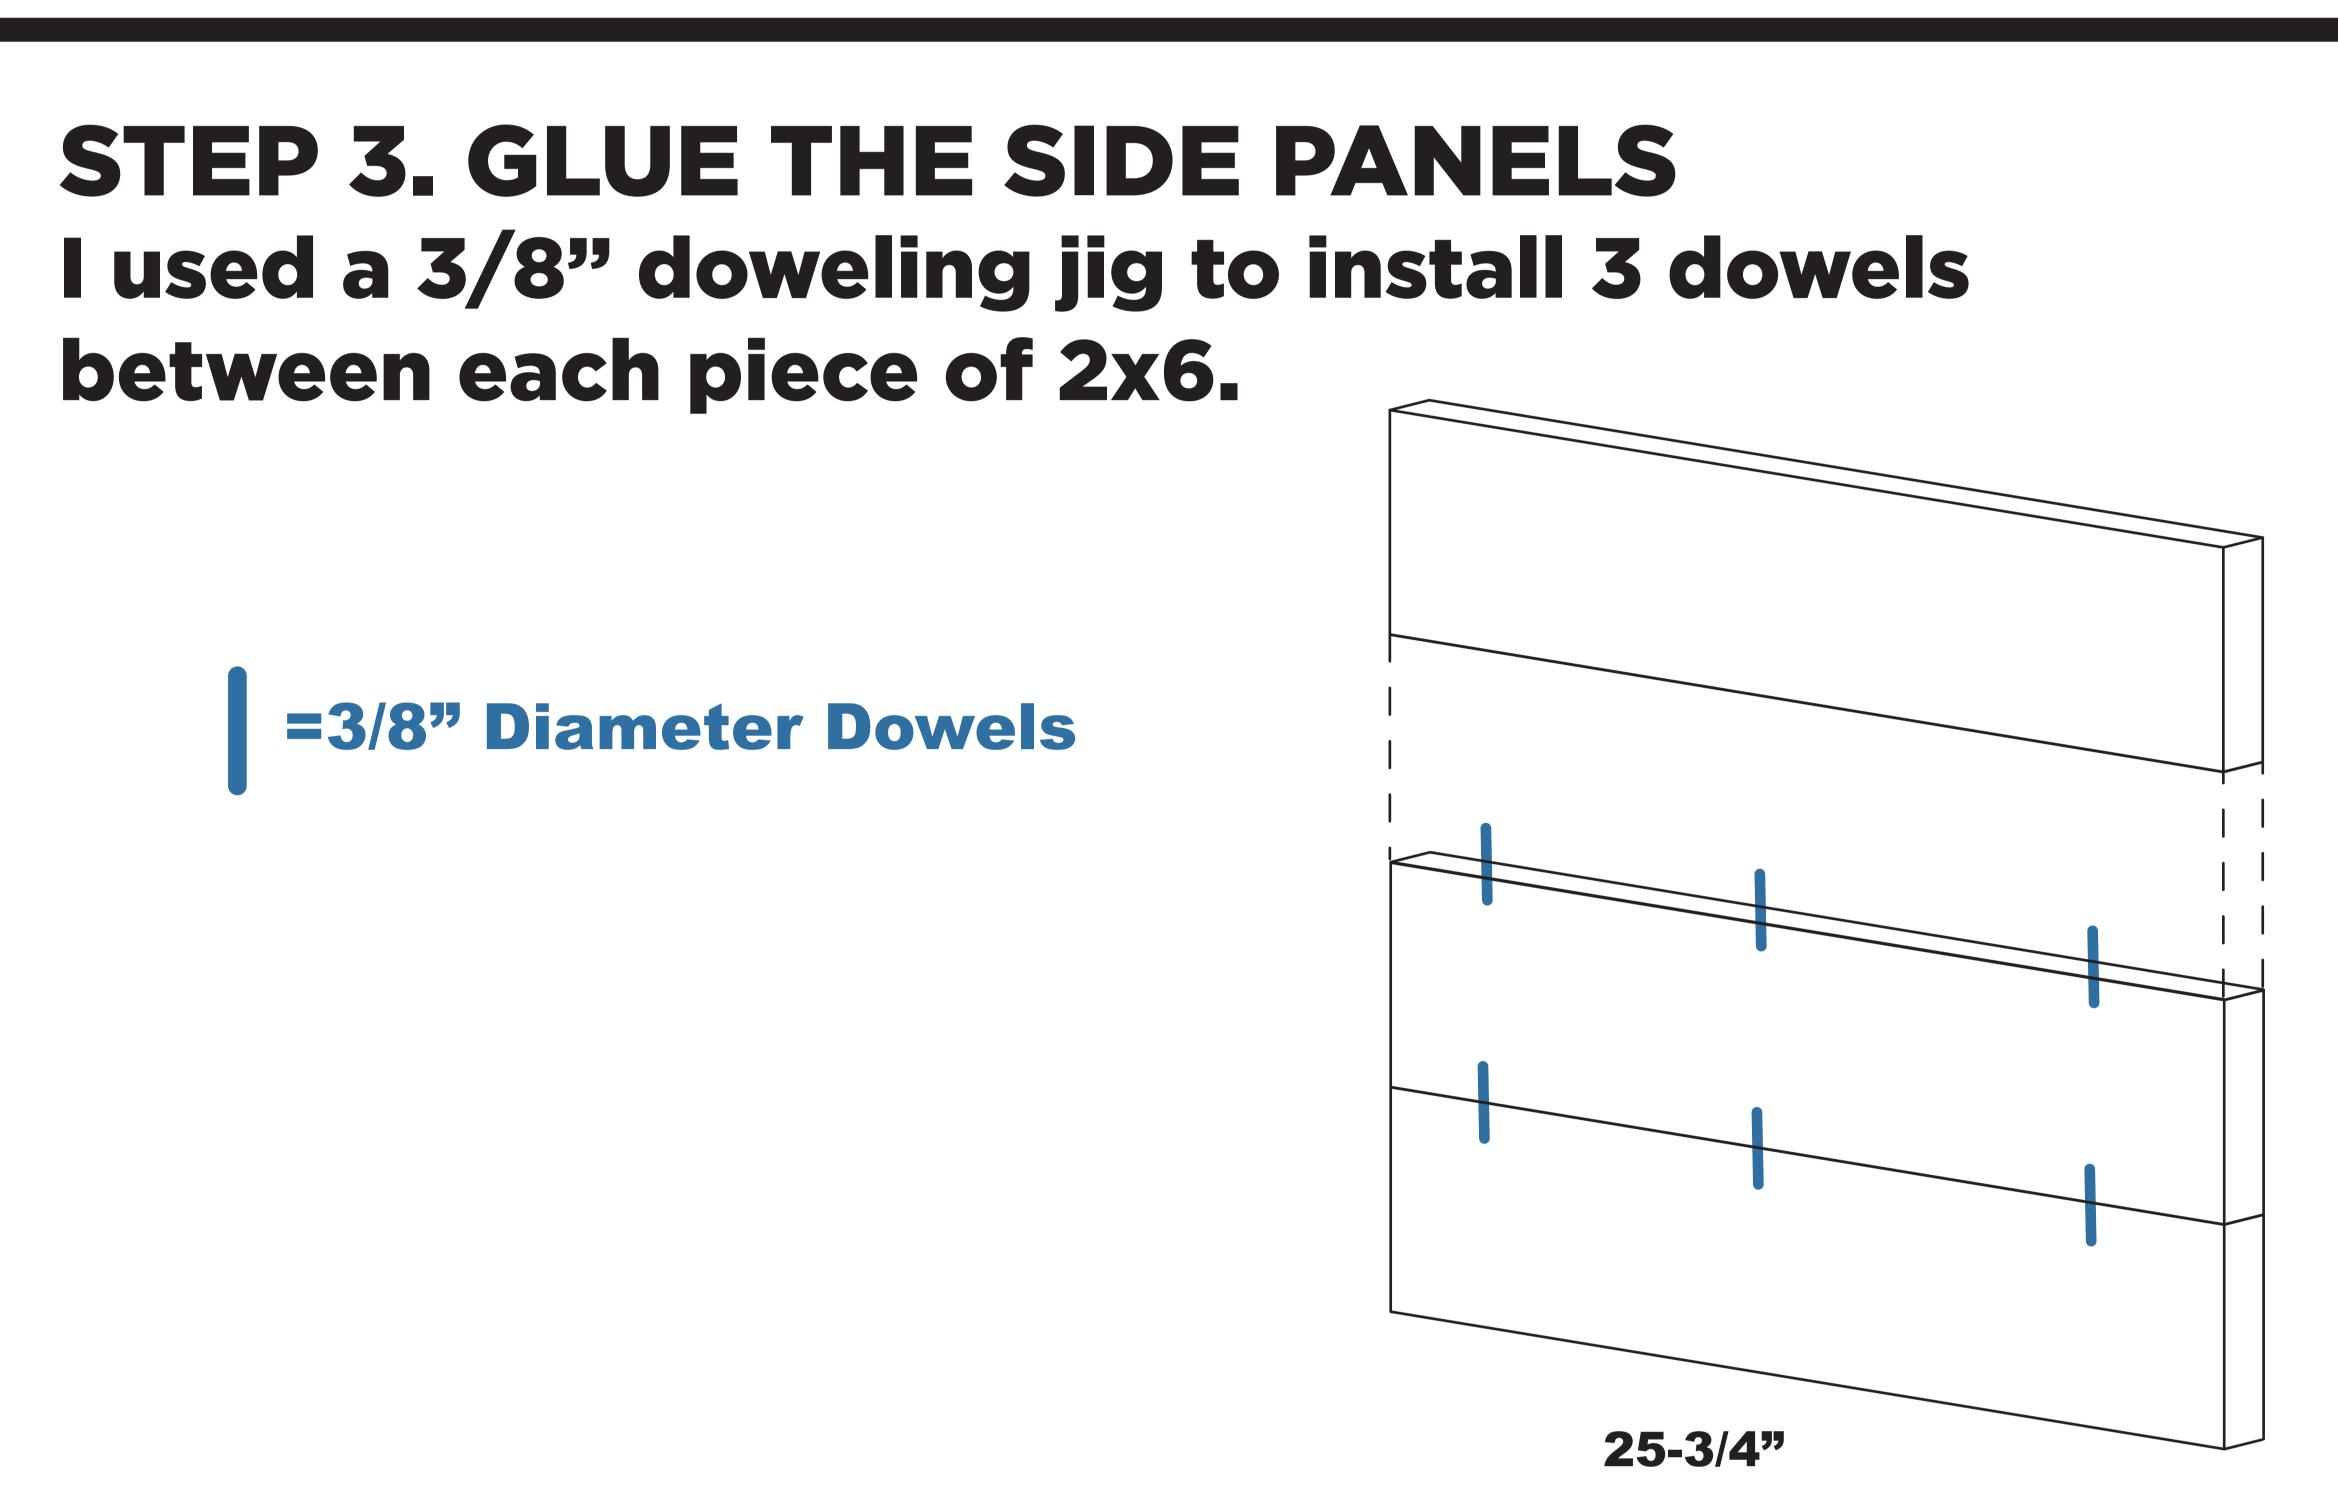

STEP 4. CUT THE BACKREST PIECES

I used my circular saw cut the pieces for the backrest.

